

***SPECTECH***

**ST350 Radiation  
Counter**

**(For Macintosh)**

**Operating and Service Manual**

**March 2003**

***Spectrum Techniques***

## **Model ST350 RADIATION COUNTER**

The ST350 Radiation Counter brings new dimensions to Nuclear Science instruction and Health Physics training. By incorporating a specialized microcontroller, many of the features previously found only in multiple products are now combined in a single inexpensive instrument.

The classical nuclear scaler function has now been extended to include a timer, preset counter, digital ratemeter with alarm, computer interface and a battery option for field applications. When constant counting statistics are required, the preset count mode can be extremely useful and the digital ratemeter is ideal for contamination survey work. An alarm level may be set to any pre-selected value and if the count rate exceeds this level, the audible alarm is sounded warning of a high activity condition.

High voltage is fully variable from 0 to +1200 volts, allowing operation with many types of GM tubes. The supply is fully regulated and controlled by the processor for digital accuracy and readout on the display. Extra large LED's are used for the digital display for clear visual readout under widely differing ambient light conditions with leading zero suppression for clarity.

Classroom demonstrations and nuclear experiments may now be run directly from a Macintosh computer using the on-line serial data link built into the ST350 and LabLink emulation software. All functions of the Radiation Counter are accessible and may be controlled from the computer, including the high voltage setting for the GM tube. The Radiation Counter software supplied produces computer screen displays of all functions including analog emulation of the ratemeter mode. Real-time data is automatically transferred to the computer and stored in spreadsheet compatible files. Data analysis and graphical presentation is now possible using many common spreadsheet programs bringing new techniques to Nuclear Science education.

Optional batteries may be installed in the ST350 making the instrument fully portable. An AC to DC line converter/charger is supplied for continuous benchtop operation with or without the batteries installed.

**Specifications.**

Input: BNC connector. Accepts standard Geiger tubes.

High voltage: 0 to +1200 volts, digitally selectable in 25 volt increments.

Display: 6-decade LED, 1 in. numerals. Displays counts, preset counts, time, preset time, CPM, CPS, alarm level, and high voltage.

Modes: Count for preset time, count for preset count, counts/min., counts/sec., set alarm level 0-999999 cps, set high voltage 0-1200v, and remote.

Audio: Piezo alerter if countrate exceeds preset level.

Data Link: DB-9 female connector accepts DIN cable.

Power: Input 7.5 volt DC, at 500mA from AC line/charger.

Specify 110-120, 220-240 VAC at time of order. Battery option requires installation of 4 x C size NiCd rechargeable batteries (not supplied).

Dimensions: 12 in. W, x 8 in. H, x 4.5 in. D.

Software supplied: Macintosh software runs under Multi-Finder on System 6.0 and later and also runs on System 7x. Provides real-time display of simulated analog ratemeter with auto-ranging, digital ratemeter in CPM or CPS, count, elapsed time, preset count, preset time, high voltage setting, acquisition time, and run number. Data is loaded into spreadsheet compatible files for transfer.

Bi-directional LabLink offers full control of all functions including preset count, preset time, countrate in CPM or CPS, alarm level, high voltage, start, stop, reset, and data transfer. All operations may be run directly from the computer with spreadsheet compatibility.

**Operation.**

**CAUTION**

**Never operate the ST350 Radiation Counter with the GM probe disconnected. Dangerous voltages can exist at the probe connector so ensure the instrument is in the OFF position and the high voltage is set to zero before disconnecting or reconnecting the GM probe.**

**General.**

The ST350 Radiation Counter may be operated with or without the optional rechargeable batteries installed by connecting the AC power supply/charger module supplied. If batteries are installed, it may be necessary to supply an initial overnight charge before operating away from the power source.

A LOW BATTERY indicator is included to alert the operator before the batteries become fully exhausted and the instrument ceases to function. If this indicator is illuminated, discontinue use until the unit has been reconnected to the charger. To maintain good battery life and condition, rechargeable batteries should be discharged and fully recharged periodically.

**Detectors.**

Geiger-Mueller tubes produce electrical pulses when ionizing radiation events occur within their sensitive volume. For proper operation, these detectors should be run at a predetermined operating voltage specified by the manufacturer or derived empirically. To improve sensitivity to alpha and beta particle radiation, many GM tubes have extremely thin entrance windows which require considerable care in handling. Do not remove protective caps unless necessary and never touch the window.

The ST350 is designed to accommodate many types of GM probes and includes a fully adjustable high voltage power supply to cover a wide range of applications. The high voltage level may be displayed on the digital readout by moving the DISPLAY FUNCTION switch to the HIGH VOLTAGE position. Adjustments to the high voltage may now be made using the UP/DOWN buttons in 25 volt increments.

**Operating Modes and Controls.**

Each mode may be selected by the DISPLAY FUNCTION switch.

**DISPLAY OFF.** Turns off the digital display to conserve power. Mainly used when operating on internal battery power. The ST350 continues to operate in the last mode selected.

**COUNTS.** This is the normal operating mode where the display registers the number of radiation events detected by the GM tube. Before starting a count, a preset count value or preset time may be entered using the UP/DOWN buttons. If this feature is selected, once started the unit will continue to count until the preset count or preset time level is reached. Preset count mode can be very useful when constant counting statistics are required.

**TIME.** If the operator wishes to count radiation events for a predetermined time, select this position and with the unit in the STOP mode enter the required counting time in seconds using the UP/DOWN buttons. When a preset time is entered the preset count mode is reset and disabled

**RATEMETER.** This mode provides a digital display of the instantaneous count rate. It can be very useful for survey applications particularly when used in conjunction with the ALARM feature.

**ALARM SET.** An alarm level in counts per second may be preloaded into the ST350. Whenever the incoming count rate exceeds this level, an audible alarm will sound. To select this feature set the FUNCTION switch to ALARM SET and enter the required level using the UP/DOWN buttons. The ST350 may now be set to other modes with the alarm level retained.

**HIGH VOLTAGE.** This position of the function switch displays the value of the high voltage setting for the GM tube. The high voltage may be adjusted in 25 volt increments using the UP/DOWN buttons between 0 and 1200 volts.

**REMOTE.** The REMOTE feature is used with the optional LabLink computer control software. In this mode all front panel control are transferred to the computer screen. The LED indicators and numerical display will continue to show mode information being selected by the computer. When using the LabLink emulator software supplied with the ST350, the function switch must be set to the REMOTE position.

**Operation.**

Basic operation of the model ST350 Radiation Counter is straightforward and intuitive.

First set the high voltage to the recommended value for the GM tube using the HIGH VOLTAGE function and the PRESETS buttons.

If no other presets are required, return the function switch to the COUNT position. Operation may now be controlled with the START, STOP, and RESET buttons. Setting the function switch to COUNTS will display the number of radiation events detected by the GM tube, or selecting TIME will display the acquisition time in seconds.

To count for a preset time, select TIME on the function switch and enter the required counting time in seconds using the UP/DOWN buttons. Once set this time will remain until changed with the PRESET. Set the function switch to COUNTS, press RESET and start the count with the COUNT button. The count may be interrupted before the preset time is reached by pressing the STOP button and continued with the COUNT button. Once the preset time is reached the counter will stop accumulating data. At this point it is only necessary to press COUNT to restart the next cycle as the preset will automatically be restored and the count register reset to zero.


Using the preset count mode is similar to the preset time. Set the function switch to COUNTS and load the preset count value with the UP/DOWN buttons and press COUNT to start accumulating events. The acquisition time or the event register may be selected for display using the function switch. The STOP button may be used to interrupt a count without losing current data. Once the preset value has been reached, counting will stop automatically. To recycle simply press COUNT.

In the RATEMETER mode CPS or CPM may be selected using the UP/DOWN buttons.

Convenient indicator lights show the currently selected mode to assist operation. An ACTIVITY indicator is also included which monitors incoming events independent of the selected mode even in the stopped condition.

**GM Plateau.**

The correct operating voltage for the Geiger-Mueller tube may be determined experimentally using a small radioactive source such as Cs-137 or Co-60. A properly functioning tube will exhibit a "plateau" effect, where the counting rate remains nearly constant over a range of applied voltage. Place the radioactive source close to the window of the GM probe and slowly increase the high voltage until radiation events just begin to be detected. Now increase the voltage in 25 volt steps recording the counting rate at each increment. The rate should remain fairly constant over a range of voltage and then increase rapidly as the high voltage is further raised indicating that the tube is entering the breakdown region. Do not continue to operate the tube in this breakdown condition but reduce the high voltage and make a plot of the counting rate versus the applied voltage. The recommended operating voltage may now be determined as the center of the plateau region.

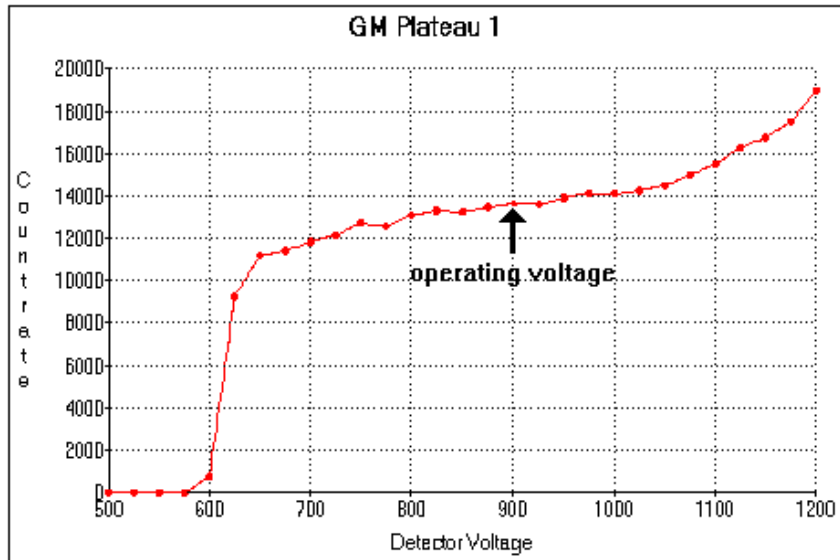

**Resolving Time.**

Geiger-Mueller tube exhibit dead time effects due to the recombination time of the internal gas ions after the occurrence of an ionizing event. The actual dead time depends on several factors including the active volume and shape of the detector and can range from a few microseconds for miniature tubes, to over 1000 microseconds for large volume devices.

When making absolute measurements it is important to compensate for dead time losses at higher counting rates. If the resolving time of the detector is known, the true counting rate may be calculated from the measured rate using the following expression:

$$n = m / (1 - mt)$$

where  $n$  is the true counting rate,  $m$  the measured rate, and  $t$  the detector resolving time.

If the detector resolving time is unknown, it may be determined experimentally using two radioactive sources. Maintaining constant counting geometry is important throughout the experiment. A special source split into two halves is available for making the measurement, but good results may be obtained by careful positioning of two standard check sources. With the high voltage correctly set for the GM tube, position the two sources ( $a+b$ ) side by side to obtain a count rate of at least 10,000 CPM. Accurately record the countrate as  $R(a+b)$ . Remove source ( $b$ ) and record the count rate as  $R(a)$ . Carefully replace source ( $b$ ) to its original position, remove source ( $a$ ) and record the count rate of source ( $b$ ) as  $R(b)$ . The resolving time is given by

$$T = \frac{R(a) + R(b) - R(a+b)}{2R(a) \cdot R(b)}$$

The resolving time of the ST350 RADIATION COUNTER is very short and is not a significant factor compared to that of the GM tube.



**Applications.**

In its basic configuration, battery operation, audible alarm and the ability to interchange GM probes allows the ST350 to be used for a variety of applications some of which are listed below.

Surface contamination measurement.

Personnel monitoring.

Plotting a GM plateau.

Radiation background measurement.

Natural radioactivity.

GM resolving time.

Detector efficiency.

Radiation absorption studies.

Backscattering.

Inverse square law.

Isotope half life.

Radiation properties.

Counting statistics.

Low level environmental measurements of naturally occurring radioactivity may be performed more effectively by surrounding the detector assembly with 1-2" of lead. This will have the effect of reducing the detector background, thus improving the lower limit of detection.


**LabLink ST350 Radiation Counter Software for Macintosh**

Your ST350 Radiation Counter is supplied with a computer communication and control software package named LabLink. Command and data are transferred via the supplied DIN cable connected between the ST350 and the computer's modem port. LabLink allows counting control of the ST350 from either the front panel buttons or the computer system.


Install LabLink 350 software to your Macintosh computer desktop. Connect the Macintosh to the ST350 using the RS-232 cable. The RS-232 cable will connect from either the printer or the modem port of the Mac to the RS-232 Macconnector on the ST350 rear panel.

Connect the ST350 to a power source, turn it ON, and open the ST350 LabLink application. An introductory window will appear with the software version information. Click the Okay screen button to complete initialization and proceed to the **Scaler** screen shown below.


The software will automatically determine which port the ST350 is connected and perform the necessary initializations. A small box in the upper right-hand corner will read **No Response** until communication is established and then read **Stopped**.

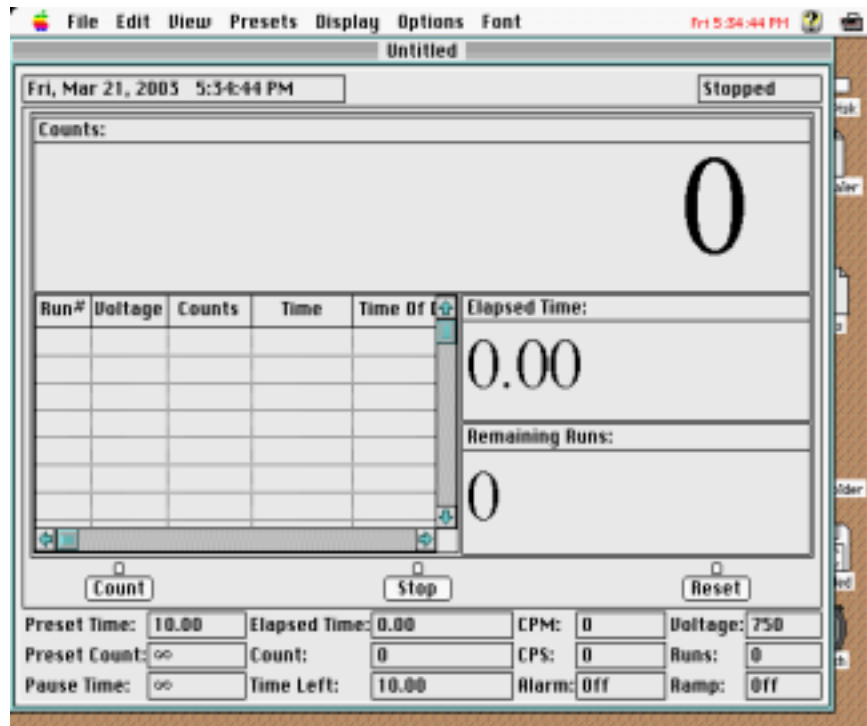

The **Analog Rate Meter** mode (shown below) provides a large screen display of the instrument meter which can be very useful for classroom demonstrations of basic radioactivity.

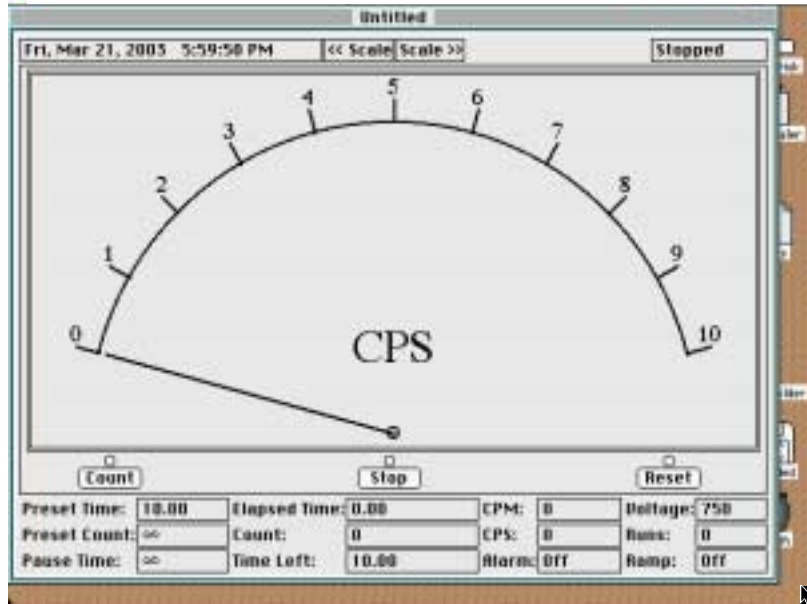

For more precise readings, the digital ratemeter mode (shown below) may be preferred. When in a rate meter mode, use the **View** pull down menu to select display in CPM or CPS.

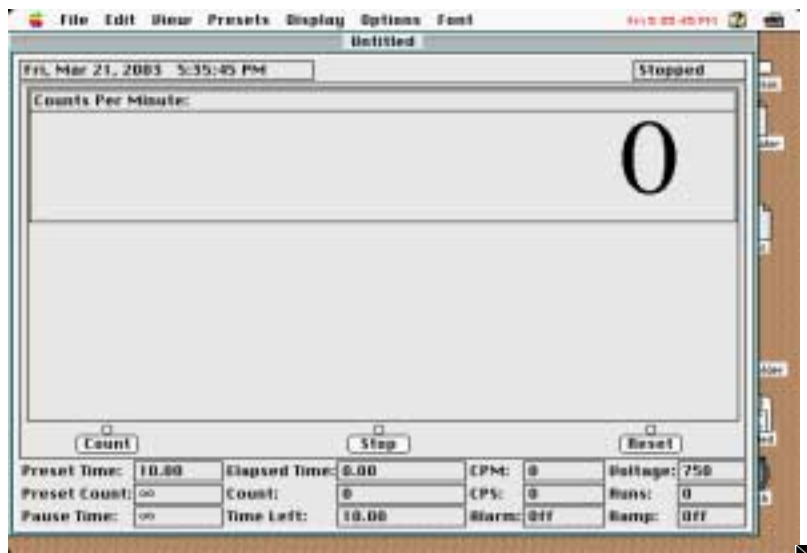

## **Software Operation**

Once the software is executed, it defaults to the *Scaler* view. Above the ST350 program window are the main menu headings. From left to right they are *File*, *Edit*, *View*, *Presets*, *Display*, *Options*, and *Font*.

When in *Scaler* view, the top half of the ST350 program window displays information in four different sections. These are *Counts*, *Data Table*, *Elapsed Time*, and *Remaining Runs*.

In *Digital Rate Meter View*, only the counts are displayed in this upper section. The *Analog Rate Meter View* simulates an analog meter by displaying a meter and a moving needle in this upper section.

Immediately below the upper section of the program window are push-button icons, which represent the *Count*, *Stop*, and *Reset* buttons on the ST350.

In the lower portion of the software window 12 types of information can be viewed simultaneously. These are: *Preset Time*, *Elapsed Time*, *Pause Time*, *Preset Count*, *CPS*, *CPM*, *Time Left*, *Alarm*, *Ramp*, *Voltage*, and *Runs*.

**Note:** When connected to a Macintosh and running the application software, the ST350's controls will NOT function, allowing it to only be controlled from the Mac. However, once the ST350 program is closed or the unit is disconnected from the Mac, the user will regain use of the ST350's controls.

## **Menus**

This section describes the menus and their contents. The menus are *File*, *Edit*, *View*, *Presets*, *Display*, *Options*, and *Font*.

### **File Menu**

The *File* menu contains *New*, *Save As*, *Page Setup*, *Print*, and *Quit*.

### **New**

Selecting *New* will reset the *Data Table* section of the display deleting all of the data. If this section contains data that has not been saved, a box appears asking if changes are to be saved. Selecting *Yes* allows the data to be saved before it is deleted. Selecting *No* will delete the data without saving it.

### **Save / Save As**

*Save* allows the user to save the data contained in the *Data Table* section. If the data has been saved previously it will use the same file name. If the data has not been saved, it will prompt the user for a file name and allow a location to be selected. *Save As* always ask for a file name, whether or not the file has been previously saved.

### **Page Setup / Print**

*Page Setup* opens the standard Macintosh page setup box allowing the user to select the page size, scaling, and the orientation. *Print* opens the standard Macintosh page setup box allowing the user to configure the printing properties. Selecting *OK* will print a text representation of the data displayed in the *Data Table*.

### **Quit**

Selecting *Quit* will close the program and return control back to the ST350's hardware controls.

## **Edit Menu**

The *Edit* menu contains the *Copy Data Table*, *Clear Data Table*, and *Show Clipboard* selections.

### **Copy Data Table**

Selecting *Copy Data Table* copies the Data Table's contents to the clipboard.

### **Clear Data Table**

Selecting *Clear Data Table* erases the Data Table. Information copied to the clipboard is not affected when the Data Table is erased.

### **Show Clipboard**

This displays the contents of the clipboard.

### **View Menu**

The *View* menu contains the three main views of the ST350 program: *Scaler*, *Digital Rate Meter*, and *Analog Rate Meter*. The *View* menu also enables selection of *Counts per Second*, *Counts per Minute* and *Counts*.

#### **Scaler**

When the ST350 program first runs, it defaults to the *Scaler* view. When in this view, the top half of the ST350 program window displays the *Counts*, *Data Table*, *Elapsed Time*, and *Remaining Runs* sections. When *Scaler* and *Counts* are selected in the *View* menu, the *Counts* section displays the current number of radioactive events captured in the most recent data acquisition. When *Scaler* and *Counts per Second* are selected, the *Counts* section displays the count rate in counts per second. When *Scaler* and *Counts per Minute* are selected, the *Counts* section displays the count rate in counts per minute.

#### **Digital Rate Meter**

The *Digital Rate Meter* view displays the counts in counts-per-second or in counts-per-minute. However, unlike when in *Scaler* view, the *Digital Rate Meter* view does not show the *Data Table*, *Elapsed Time*, or *Remaining Runs* sections. The *Counts per Second* view is identical to the ST350's display when it is in *Rate* mode. The *Counts per Minute* display is only available using the ST350 software.

#### **Analog Rate Meter**

The *Analog Rate Meter* view simulates an analog meter by displaying a meter and a moving needle. The meter is also auto-ranging and automatically sets its self to the correct scale, regardless of the count rate. As with the *Digital Rate Meter* view, the *Analog Rate Meter* view can show the count rate in *Counts per Second* or in *Counts per Minute*.

### **Presets Menu**

The *Presets* menu allows the *Preset Time*, *Preset Counts*, *Preset Runs*, *Pause Time*, *High Voltage*, and *Rate Alarm* to be set before counting takes place.

### **Preset Time**

*Preset Time* opens a box that displays the available preset time settings in seconds. The setting range is in decades from 0 to 900,000 with zero being *OFF*. To change the setting, click on a number. When the setting is reached, the counting will stop automatically.

### **Preset Counts**

*Preset Counts* opens a box that displays the available preset counts settings. The setting range is in decades from 0 to 900,000 with zero being *OFF*. To change the setting, click on a number. When the setting is reached, the counting will stop automatically.

### **Preset Runs**

*Preset Runs* opens a box that displays the available preset run settings with zero being *OFF*. To change the setting, click on a number.

*Preset Runs* is used in conjunction with *Preset Time*. The *Preset Runs* setting determines the number of times a count cycle is automatically repeated. Once all the runs have executed, counting will automatically stop. During this operation, the *Remaining Runs* section of the main view displays the remaining runs.

When used with the *Ramp* feature, *Runs* allows the user to automatically graph a detector's plateau.

### **Pause Time**

*Pause Time* is used in conjunction with *Preset Time* and *Runs*. It causes the counting to pause for a predetermined number of seconds between runs. When *Pause Time* is selected, a box appears allowing the *Pause Time* to be selected.

### **High Voltage**

*High Voltage* opens a box that displays the available high voltage settings in 25-volt increments with zero being *OFF*. Clicking on a number will immediately turn the high voltage *On* and set it to the selected value.

### **Rate Alarm**

*Rate Alarm* opens a box that displays the available alarm rate settings with zero being *OFF*. The settings are given in counts per second. When the count rate exceeds this limit, an audio warning will sound until the count rate falls below the limit.

### **Display Menu**

The *Display* menu enables the Macintosh to change the ST350's hardware display. For example, if *Counts* is selected from the *Display* menu, the ST350 display will switch to the *Counts* mode.

### **Options Menu**

The *Options* menu consist of *Voltage Ramp On*, *Voltage Ramp Off*, *HV Limit*, *Start Counting*, *Stop Counting*, *Reset*, *Serial Relink*, *Serial Port*, *Scale Up*, *Scale Down*, *Format Times* and *Show Date*.

#### **Voltage Ramp On**

Causes the high voltage to automatically increment in steps of 25 volts from the current setting until the preset number of runs has completed.

#### **Voltage Ramp Off**

Disables the *Voltage Ramp* feature.

#### **Start Counting**

Functions the same as the *Count* button.

#### **Stop Counting**

Functions the same as the *Stop* button.

#### **Reset**

Functions the same as the *Reset* button.

#### **Serial Relink**

Causes a re-initialization of the serial connection link. This Command is only used when a serial connection has been inadvertently broken and an *I/O Error* is reported in the Status field.

#### **Serial Port**

Allows either the *Modem Port* or the *Printer Port* to be manually selected for serial communications. Otherwise, the port is selected automatically from all available ports when the application is started.



### **Auto Scale**

Enable/disable automatic scaling of the *Analog Rate Meter* display.

### **Scale Up**

If not in *Auto Scale* mode, this command will adjust the meter scaling *Up* to the next range. The *>> Scale* icon located at the top of the display may be used to perform the same function.

### **Scale Down**

If not in *Auto Scale* mode, this command will adjust the meter scaling *Down* to the next range. The *<< Scale* icon located at the top of the display may be used to perform the same function.

### **Format Times**

This changes the preset and elapsed time formats from *seconds* to *hours:minutes:seconds*.

### **Show Date**

Enable/disable showing of the date along with time in the upper most right corner of the software display.

### **Font**

This menu displays the available printer fonts for your computer. The default font used is 'Times'. Font changes are limited to the *Scaler* and *Rate Meter* software selected displays.

## ***Command Button Icons:***

The *Command Button Icons* consists of the *Count*, *Stop*, and *Reset* icons and function the same as the hardware buttons on the ST350.

Selecting the *Count* icon begins counting.

Selecting the *Stop* icon stops counting.

Selecting the *Reset* icon erases accumulated counts, elapsed time and remaining run values. The *Data Table* is not affected by this function.

### **Information Display Sections:**

The Scaler view has four sections for displaying information: *Counts*, *Run Data*, *Elapsed Time*, and *Remaining Runs*.

#### **Counts Section**

The *Counts* section displays either the current number of counts or the count rate, depending on how it is set. As stated earlier, this setting can be changed by going to the *View* menu and selecting *Counts Per Second*, *Counts Per Minute* or *Counts*.

Another way of changing views is by "clicking" the area with the mouse. When the cursor is placed over this section, it changes shape and the word *SET* appears below it. When this area is clicked once, it changes to display the rate in counts per second. When this area is clicked a second time, it displays the rate in counts per minute. When it is clicked a third time, the display changes back *Counts*.

#### **Data Table Section**

The *Data Table* section displays information for each data acquisition. This information includes *Run*, *HV* (high voltage setting), *Counts*, *Time* (elapsed time in seconds), and the *Time Of Day* and *Date* the data was acquired.

Run	Voltage	Count	Elapsed	Time Of Day
1	500	0	30	4:55:21 PM
2	525	0	30	4:55:52 PM
3	550	0	30	4:56:22 PM
4	575	0	30	4:56:53 PM
5	600	442	30	4:57:23 PM
6	625	3949	30	4:57:54 PM
7	650	4305	30	4:58:25 PM
8	675	4332	30	4:58:55 PM
9	700	4539	30	4:59:26 PM
10	725	4694	30	4:59:57 PM
11	750	4681	30	5:00:28 PM
12	775	4833	30	5:00:59 PM
13	800	4927	30	5:01:30 PM

### **Elapsed Time Section**

The *Elapsed Time* section displays the time elapsed during counting. The elapsed time will reset to zero when either the *Reset* button is pressed or when counting is re-started after the end of a preset time. If a preset time is not set, or counting is interrupted with the *Stop* command, the elapsed time will not reset and will continue running when *Count* is selected again.

As described earlier, the *Time* format can be changed by selecting *Format times* under the *Options* menu. Another way of changing the time format is by "clicking" the *Elapsed Time* area with the mouse. When the cursor is placed over this section, it changes shape and the letters *SET* appears below it. When this area is clicked, the time format will toggle between *seconds* and *hours:minutes:seconds*.

### **Remaining Runs Section**

The *Runs Remaining* section displays the remaining number of runs set by the *Preset Runs* function.

### ***Lower Display Section:***

The lower display section shows a summary of various data and presets. These are *Preset Time*, *Elapsed Time*, *Pause Time*, *Count*, *CPS* (counts per second), *CPM* (count per minute), *Time Left* (remaining *Preset Time*), *Alarm* (*OFF* or *ON*), *Ramp* (*OFF* or *ON*), *Voltage* (*High Voltage* setting), *Runs*, and *Preset Count*.

If the mouse pointer is clicked over the *Elapsed Time*, the time format will toggle between *seconds* and *hours:minutes:seconds*.

Clicking the mouse pointer over *Ramp*, toggles it between *OFF* and *ON*.

**Maintenance.**

**CAUTION**

**Dangerous voltages can exist inside the ST350 from the high voltage power supply. Before removing the cover ensure the instrument is in the OFF position and the high voltage is set to zero. Only qualified technicians should attempt any repairs.**

Your ST350 has been built with care using quality parts and should not require any routine service. In the unlikely event of a malfunction, the unit may be returned to the factory for repair. We will gladly supply a cost estimate if the warranty period has expired.

Battery installation is straightforward and involves removing the rear cover which is held in place by four screws. Ensure **the instrument is in the OFF position and the high voltage set to zero!** Replacement requires standard C size **Nickel-Cadmium** batteries, preferably with a 2000 mAh rating.

A complete list of parts is included for your convenience. Please contact our customer service department for pricing and availability. In many instances substitute parts may be used providing they meet or exceed the original specifications.

**Warranty**

Spectrum Techniques warrants products of our manufacture against defects in workmanship or material for a period of one year from date of shipment. We will repair or replace at our option, any instrument that is deemed to be defective during this period. This warranty fully covers all replacement parts and labor. The instrument must be returned to our factory prepaid and we in turn will pay the cost of return shipping .

This warranty does not cover damage caused by mishandling or misuse. GM tubes with broken windows are specifically excluded from this warranty. Accessory items not manufactured by Spectrum Techniques but supplied as part of our systems will be subject to the original manufacturers warranty.



# Parts List





## Component Board Layout





# Schematic



